

JM-1450 PARTS LIST

ITEM	DESCRIPTION	Mi-T-M #	QTY	ITEM	DESCRIPTION	Mi-T-M #	QTY
1	HOSE REEL HANDLE	7-0225A01	1	38	UNLOADER	8-0627	1
2	DECAL - WARNING/OPERATION	N/A	1	39	TEE	24-0184	1
3	BOLT	27-0015	2	40	NIPPLE	24-0010	1
4	WASHER	28-0002	10	41	BALL VALVE	22-0461	2
5	COMPONENT TOOL BOX	20-1213A64	1	42	SCREW NIPPLE	23-0493	1
6	13" HOSE REEL	50-0191	1	43	HANDLE GRIP	7-0226	1
7	NUT	-	1	44	HANDLE GRIP	7-0227	1
8	BOLT	-	1	45	DECAL- SILVER STICKER	34-0075	1
9	HOSE REEL	-	1	46	DECAL - WARNING RISK OF INJECTION/EXPLOSION - (E/S)	N/A	1
10	EDGING *(ONE FOOT REQUIRED)	33-0020	1	47	HOSE	15-0308	1
11	HOSE REEL SWIVEL	24-0335	1	48	CLIP	33-0291	1
12	LOCKNUT	30-0155	8	49	TAG - WARNING RISK OF ELECTROCUTION	N/A	1
13	HOSE REEL MOUNTING PLATE	20-1218A01	1	50	CABLE TIE	33-0022	1
14	WASHER	28-0003	8	51	MOTOR ASSEMBLY	851-0388	1
15	LOCKNUT	30-0157	8	52	DECAL-ON/OFF	34-0612	1
16	ISOLATOR	14-0069	4	53	DECAL - WARNING BACKFLOW PROTECTION	N/A	1
17	BOLT	27-0016	4	54	DECAL - WARNING RISK OF ELECTROCUTION - (E/S)	N/A	1
18	SCREW COUPLER	23-0490	1	55	HANDLE GRIP	7-0167	1
19	HOSE	15-0313	1	56	DECAL - ON/OFF JM-1450	34-2637	1
20	HUB CAP	33-0055	2	57	DECAL - CAUTION/IMPORTANT - (E/S)	N/A	1
21	WHEEL	14-0124	2	58	BOLT	27-0067	4
22	FRAME	5-0305A64	1	59	REDUCER	23-0017	1
23	WASHER	28-0022	8	60	PRESSURE GAUGE	22-0466	1
24	BOLT	27-0068	4	61	TEE	23-0127	1
25	SPRING PIN	43-0138	1	62	POP-OFF VALVE	22-0468	1
26	BOLT	27-0850	2	63	RELIEF VALVE	22-0005	1
27	ISOLATOR	14-0119	2	64	KEY	43-0072	1
28	SHOULDER SCREW	27-0895	2	65	LOCKWASHER	29-0155	4
29	SPRING	49-0165	2	66	DECAL - JM-1450 BASEPLATE	34-2625	1
30	HANDLE	7-0224	1	67	DECAL - JM-1450 1500PSI MAX	34-2626	1
31	HANDLE GRIP	7-0143	2	68	BOLT	27-0117	4
32	BALL KNOB	7-0223	2	69	DECAL - PUMP INSTRUCTIONS - (E/S)	34-1068	1
33	BYPASS HOSE	15-0020	1	70	PUMP	3-0367	1
34	HOSE CLAMP	42-0011	2	71	TAG - IMPORTANT OIL PLUG - (E/S)	34-1067	1
35	BARB	23-0069	1	72	HOSE BARB	23-0073	1
36	FILTER - WATER	19-0096	1	73	DECAL SET/JM-1450	71-0001	1
37	ELBOW	24-0105	2				

*MUST ORDER IN ONE FOOT LENGTHS

